
#### **Control Panel Essential Instructions**

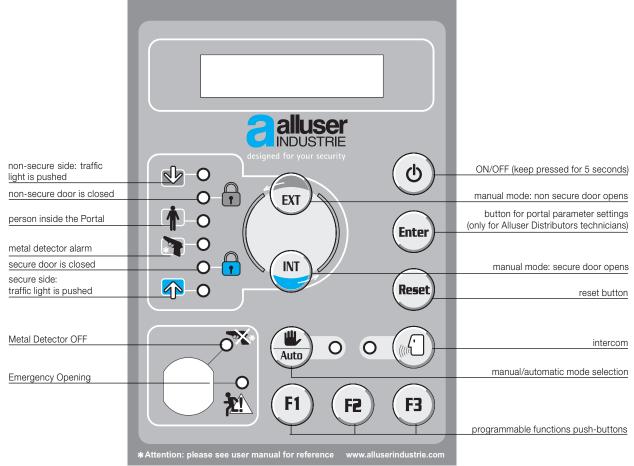

For more information, please read the full user instruction manual.

### Precautions Maintenance

Caution! Don't use water near the drive units, control panels and floormat.

**Warning!** Switch off the power supply of the Portal during maintenance or other works.

Daily: Check daily the operation of the Portal.

**Weekly:** Vacuum clean the bottom door guide rail. Clean the structure with a wet cloth and a non aggressive soap.

**Yearly:** Once a year the Portal needs a maintenance check which must be made by an Official Alluser Distributor.

Property of Alluser Industrie Srl. Any unauthorised reproduction or use of these materials is strictly forbidden. All the specifications and descriptions displayed here are subject to change without notice.

# Alluser Industrie Portals: User Instruction Card



## **Explanation symbols**

Secure side (Side 2)



Non secure side (Side 1)



A.P.D. (Anti Piggy-backing device): allows the transit of only 1 person at the time.



Metal Detection device.



Biometric Control inside the Portal.



IR Safety Sensors.

# standard features



Multi-function Control Panel for remote control of the Portal.



Secure side mechanical emergency unlocking device.



Emergency battery back up: 2-4 hrs in standard working.



Portal working power 24 Vdc.



LED traffic-lights at secure side and non secure side.



Max current absorbed 1.2 A.



Fire Alarm signal opens secure and/or non secure side.



Anti-slip floor rubber mat.



Certificated metal portal structure in accordance with FB4/NS EN 1522. (Top Canopy: FB2)



Internal halogen light



**ATTENTION:** Check the emergency and safety devices and the general operation of the Portal daily!

# Safety and User Instructions

#### **Safety Devices**

#### Emergency unlocking device





Secure side mechanical emergency unlocking device.

#### IR Safety Sensors









IR safety sensors

#### Traffic-light signals

#### Green up arrow flashes









Portal ready for next transit

#### Red cross flashes





Portal is not ready

#### Red cross flashes quickly continuously





Portal not ready: automatic reset system (3-6 seconds)

#### Red cross flashes quickly continuously and a beep sounds





Emergency opening: both doors opened (when possible).

#### Working Principle of Alluser Portals

#### Standard transit: One authorised user









#### APD + Biometric Authentication: authorised transit









Door 1 opens Person inside IR presence sensor Both doors closed A.P.D.: OK Bio OK Door 2 opens

#### APD + Biometric Authentication: transit rejected/denied









Door 1 opens Person inside IR presence sensor Both doors closed A.P.D.: Alarm! 2 people inside Transit denied Door 1 opens again

#### APD + Biometric Authentication: unauthorised user









Door 1 opens Person inside IR presence sensor Both doors closed A PD · OK Biometric not OK Transit denied Door 1 opens again

#### Metal Detection: user without metal objects









Door 1 opens Person inside Metal detector: OK IR presence sensor Both doors closed Door 2 opens

#### Metal Detection: user with metal objects









Door 1 opens Person inside Metal detector: ALARM Transit denied Person exits from door 1

# Cleaning instructions









Pull/Turn the lever Open manually the door Enter and clean the door After cleaning, put the lever in normal position



**ATTENTION:** during the cleaning, when you are inside the Portal. NEVER close the secure side doors completely, since you could be blocked inside the Portal

# Cleaning Instructions: Service Mode Key



Insert key

Portal in Standby mode: light ON/OFF is switched off.

Key in Service position

Secure side door opens slightly

The door can be moved freely

Cleaning

After the presetted cleaning time is expired => secure door opens completely

If somebody inside => new time session

If portal empty => doors closes

Turn key in position "0"

Remove key

